

USB 1.1 RV1850


1-port USB 1.1 85m* Cat 5e Extender System

Quick Start Guide


←EXTREME→
USB®

Before you get started, ensure that all the drivers required for your USB device(s) are installed.

- 1 Place units where desired, and connect the Cat 5e (solid core) extension link cable to the Link ports (RJ45) on the local extender and remote extender.

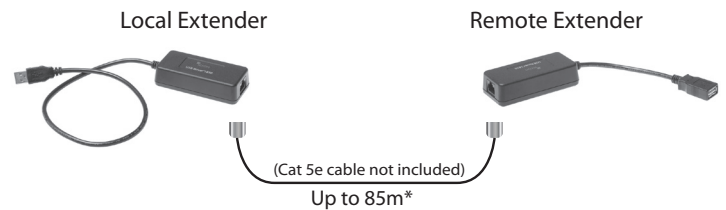

- 2 Connect the local extender to the computer.

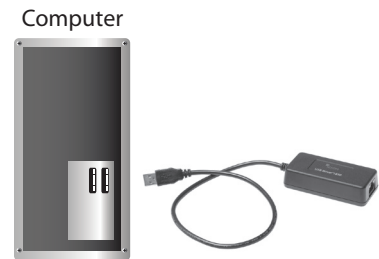

- 3 Attach the USB device to the remote extender.



* Up to 40m for all USB devices; 85m achievable for most low-powered HID USB devices.