


USB 1.1 RV2850


Quick Start Guide

Before you get started, ensure that all the drivers required for your USB device(s) are installed.

- 1 Place units where desired and connect the Cat 5e (solid core) extension link cabling to the Link ports (RJ45) on the local extender and remote extender units.

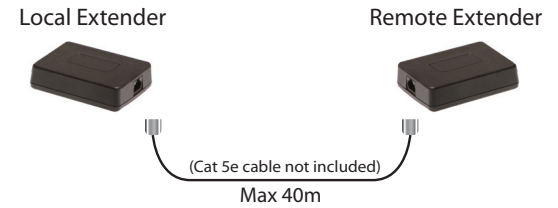

- 2 Connect the local extender to PC with included USB cable.

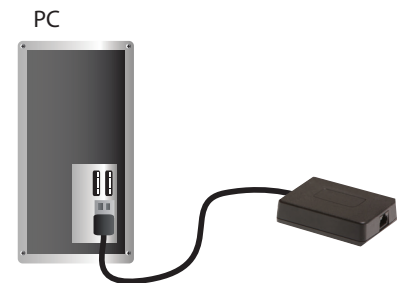

- 3 Attach USB device(s) to the remote extender.

