

USB 2.0 RG2211



1-Port USB 2.0 100m (330 ft) Cat 5e
Extender System with Flexible Power

Quick Start Guide


←EXTREME→
USB®

Before you get started, ensure that all the drivers required for your USB device(s) are installed.

- 1 Place units where desired, and connect the Cat 5e (solid core) extension link cable to the Link ports (RJ45) on the local extender and remote extender.
- 2 Connect the power adapter to the desired unit, either the local extender or remote extender.

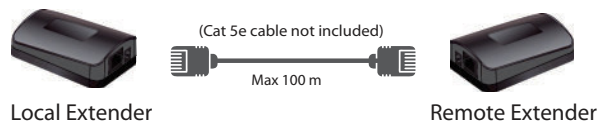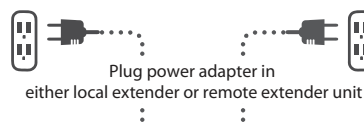

- 3 Connect the local extender to the computer using the included USB cable.

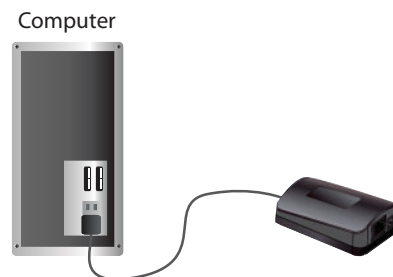

- 4 Attach the USB device to the remote extender.

