

USB 2.0 RG2224 / RG2244


4-port USB 2.0 Fiber Extender System

Quick Start Guide




Before you get started, ensure that all the drivers required for your USB device(s) are installed.

- 1 Place extenders where desired and connect the fiber link extension cable to the Link ports on the local extender and remote extender.

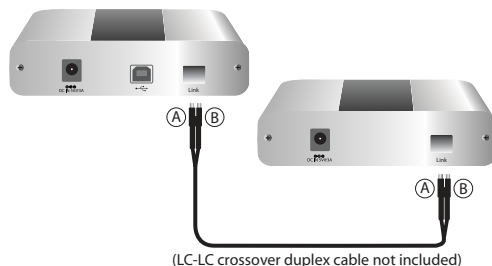


Max 500m multimode fiber for RG2224
Max 10km singlemode fiber for RG2244

- 2 Connect the local extender to the computer using the included USB cable.

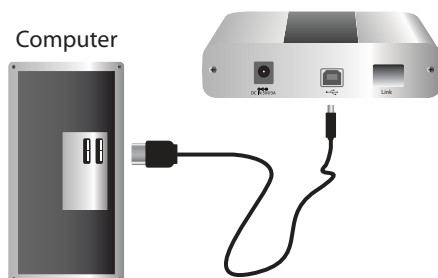


Note: Power adapter is not required at the local extender for normal operation.

- 3 Connect the remote extender to the AC adapter and plug into a power source.

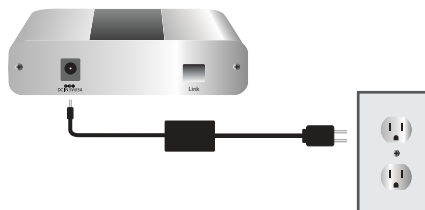

- 4 Attach USB device(s) to the remote extender.

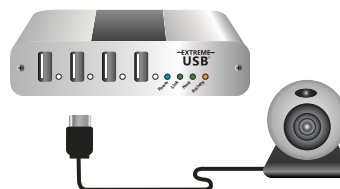

Includes the ExtremeUSB® suite of features:



- Transparent USB extension
- True plug and play; no software drivers required
- Works with all major operating systems: Windows®, Mac OS X®, and Linux®