

# USB 2.0 RG2204


4-port USB 2.0 100m Cat 5e Extender System

## Quick Start Guide




Before you get started, ensure that all the drivers required for your USB device(s) are installed.


- 1 Place extenders where desired and connect the Cat 5e extension link cable to the Link ports (RJ45) on the local and remote extender.

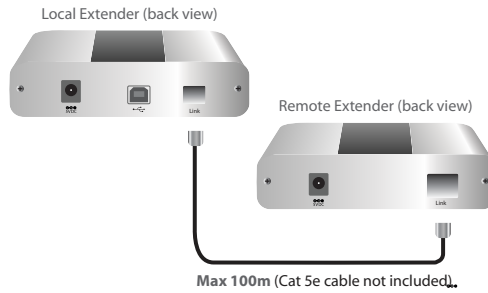


- 2 Connect the local extender to the computer using the included USB cable.

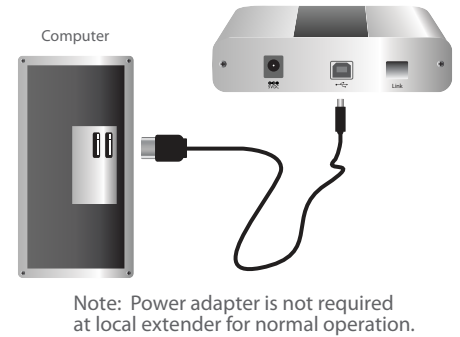

- 3 Connect the remote extender to the AC adapter and plug it into a power source.

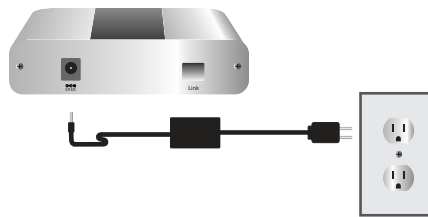

- 4 Attach USB device(s) to the remote extender.

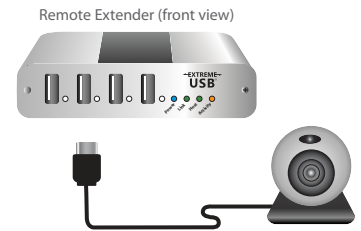

Includes the ExtremeUSB® suite of features:



- Transparent USB extension
- True plug and play; no software drivers required
- Works with all major operating systems: Windows®, Mac OS X®, and Linux®

# Certification, Compliance and Warranty Information

## **FCC Radio Frequency Interference Statement Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

## **CE Statement**

We, [Insert Company Name], declare under our sole responsibility that the [Insert Product Name], to which this declaration relates, is in conformity with European Standard EN 55022 Class B, EN 61000 and EN 50024.

## **IC Statement**

This Class B digital apparatus complies with Canadian ICES-003.



Information contained herein is subject to change without notice. 90-01004-A02