

# USB 3-2-1 Starling™ 3251C

1-Port USB 3-2-1 Fixed Range Point-to-Point  
Extender System

## User Guide



Thank you for purchasing the USB 3-2-1 Starling™ 3251C.

Please read this guide thoroughly.

This document applies to the following part numbers:

Model	Distance	Fire Rating	Part Number
USB 3-2-1 Starling 3251C-10	10 meters, 32.8 feet	CM	01-00739
USB 3-2-1 Starling 3251C-10-PL	10 meters, 32.8 feet	Plenum	01-00740

### **FCC Radio Frequency Interference Statement Warning**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

### **CE Statement**

We, Icron Technologies Corporation, a Maxim Integrated brand, declare under our sole responsibility that the USB 3-2-1 Starling™ 3251C, to which this declaration relates, is in conformity with European Standards EN 55024, EN 55032, EN 61000, and RoHS Directive 2011/65/EU + 2015/863/EU.

### **IC Statement**

This Class A digital apparatus complies with Canadian ICES-003 Issue 7.

### **WEEE Statement**

The European Union has established regulations for the collection and recycling of all waste electrical and electronic equipment (WEEE). Implementation of WEEE regulations may vary slightly by individual EU member states. Please check with your local and state government guidelines for safe disposal and recycling or contact your national WEEE recycling agency for more information.

### **Product Operation and Storage**

Please read and follow all instructions provided with this product and operate for intended use only. Do not attempt to open the product casing as this may cause damage and will void warranty. Use only the power supply provided with this product (if applicable). When not in use, product should be stored in a dry location between -20°C and 70°C.

©2021 All rights reserved.  
Document #90-01799-A01

# Contents

## **4 Introduction**

Product Contents 4

Features 4

The Local Extender 5

The Remote Extender 6

## **7 Installation Guide**

Installing the USB 3-2-1 Starling 3251C Extender System 7

Installing the Local Extender 7

Connecting the Local Extender to the Remote Extender 7

Installing the Remote Extender 8

Checking the Installation 8

Connecting a USB Device 8

Compatibility 8

## **11 Troubleshooting**


## **13 Specifications**

## **14 Power Supply and Accessories**

## **14 Technical Glossary**

# Introduction

This guide provides product information for the USB 3-2-1 Starling™ 3251C, installation instructions and troubleshooting guidelines. The instructions in this guide assume a general knowledge of computer installation procedures, familiarity with cabling requirements and some understanding of USB devices.

 NOTE: Notes provide additional information that could be useful.

 CAUTION: Cautions provide important information about an operational requirement.

## Product Contents

Your Starling 3251C extender system contains:


- Local Extender
- Remote Extender
- USB 3.2 Gen 1 USB-C Cable (USB only)
- Custom Link Cable (10m, CM or Plenum Rated)
- Cable Pulling Eye
- Quick Start Guide

## Features

The Starling 3251C incorporates ExtremeUSB-C™ technology, enabling users to extend USB 3.2 beyond the standard 3m cable limit for USB 3.2 peripheral devices. This extender system is composed of two individual units, the Local Extender and the Remote Extender, and has the following key features:

- 10m extension using included Cable
- Support for new USB 3.2 Gen 1/2 host controllers and devices (up to 5Gbps)
- Bus Powered Operation
- Supports all device types
- Backwards compatible to USB 2.0 devices

 Starling 3251C does NOT support DisplayPort ALT mode functionality through the USB-C connection.

 The Starling models 3251C-10 with CM Cable and 32510C-10-PL with Plenum Cable are not interchangeable. The Plenum model does not work with the CM Cable. The CM model does not work with the Plenum Cable.

The Starling 3251C includes the ExtremeUSB-C™ suite of features:




- Transparent USB extension supporting USB 3, 2 and 1
- True plug and play; no software drivers required
- Works with all major operating systems: Windows®, macOS™, Linux® and Chrome OS™


## The Local Extender

The Local Extender connects to the computer using a standard USB 3.2 Gen 1 cable. Power is provided by the USB Host/Hub or optional DC input.

Front View

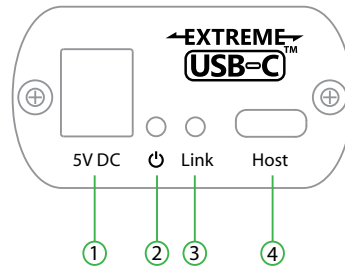

Rear View

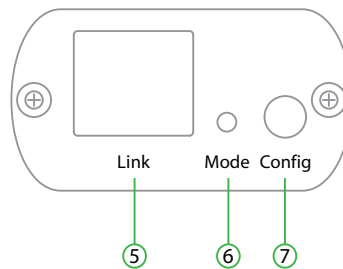

ITEM	TYPE	DESCRIPTION
1	DC Power Port	Optional DC power input, accepts 5V 3A. (Sold separately) 5V 3A Power Supply (LVL VI) 1.7mm ID (Ref PN 21-00111)
2	Power LED * <i>Refer to note below</i>	LED is SOLID GREEN When sufficient power is provided by host. LED is SOLID AMBER when less than optimal power is not guaranteed by host.
3	Link LED	LED is SOLID GREEN ON when Local Extender is linked to an opposite Remote Extender. LED is OFF or BLINKING when there is no connection between the Local Extender and Remote Extender units.
4	USB Host Port	USB 3 Type-C receptacle used to connect Local Extender to USB 3 Host computer.
5	Link Port (ARJ45)	Accepts custom ARJ45 Cable included with product.
6	Mode	Reserved for manufacturer use.
7	Config	Reserved for manufacturer use.




\* Guaranteed sufficient power via USB Bus power requires a USB-C connection to a USB-C power upstream capable of 5V 3A configuration. When using a USB-A to USB-C or similar legacy connection, LED will be AMBER. It is recommended in situations where the LED is AMBER that sufficient testing be performed to guarantee system stability.


## The Remote Extender

The Remote Extender provides a USB 3.2 Gen 1 Type-C port for standard USB devices and allows you to connect one USB device directly.

Front View

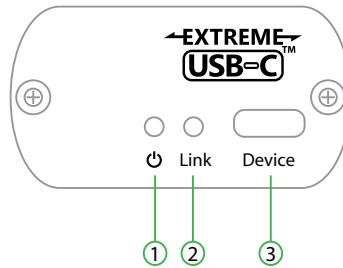

Rear View

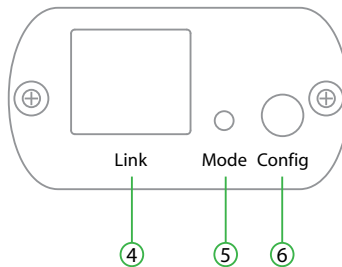

ITEM	TYPE	DESCRIPTION
1	Power LED	LED Is SOLID GREEN when sufficient power is supplied by Local Extender. LED is SOLID AMBER when less than optimal power is not guaranteed by host.
2	Link LED	LED is SOLID GREEN ON when Remote Extender is linked to an opposite Local Extender. LED is OFF or BLINKING when there is no connection between the Local Extender and Remote Extender units.
3	Device Port	USB 3 Type-C receptacle used to connect Remote Extender to USB device.
4	Link Port (ARJ45)	Accepts custom ARJ45 Cable included with product.
5	Mode	Reserved for manufacturer use.
6	Config	Reserved for manufacturer use.




\* Guaranteed sufficient power via USB Bus power requires a USB-C connection to a USB-C power upstream capable of 5V 3A configuration. When using a USB-A to USB-C or similar legacy connection, LED will be AMBER. It is recommended in situations where the LED is AMBER that sufficient testing be performed to guarantee system stability.

# Installation Guide

## Installing the USB 3-2-1 Starling 3251C Extender System

To complete the installation, you will also require the following items that are not included with this system:

- USB compatible computer (host computer) with a USB compliant operating system
- USB compatible device(s)

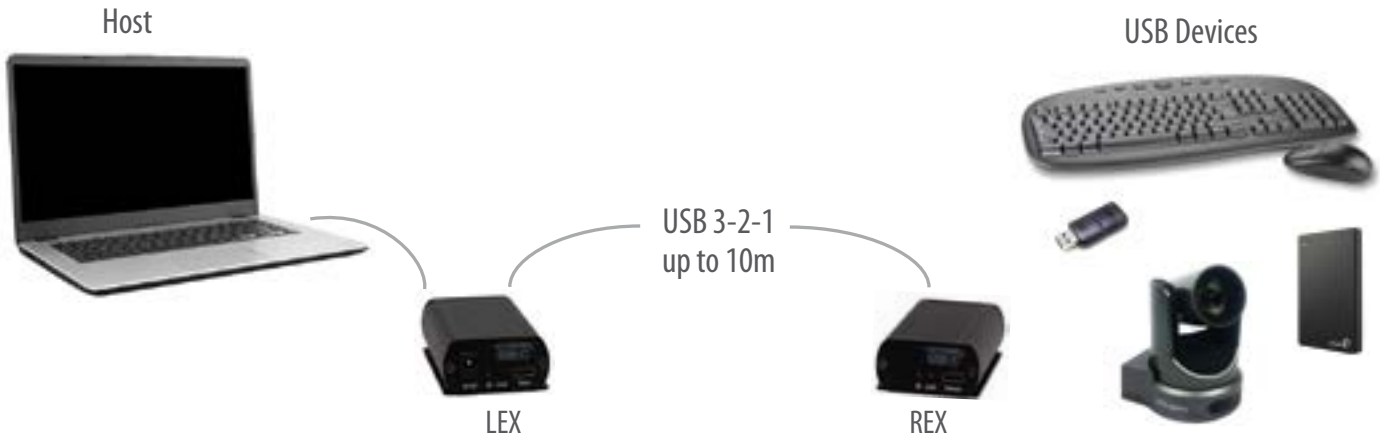

## Preparing Your Site

Before installing the Starling 3251C extender, you will need to prepare your site:

1. Place the computer where desired and set it up.
2. Ensure to locate your USB device(s) within the cable-length of the computer. If not, adjust the location of your device(s) and/or computer accordingly.

**!** Cable installation is important, particularly if high throughput applications are used. When installing, ensure the cable is installed away from, or isolated from potential sources of interference such as electrical wiring, fluorescent lighting, etc.

**note** Use the included ARJ45 Cable Pulling Eye tool when installing included cable through conduits or other tight spaces.

**note** Use only the included cable with this product; do not cut or re-size the included cable.

## Installing the Local Extender

1. Place the Local Extender near the computer.
2. Optional: Apply 5V 3A AC power supply to unit. (Sold separately)
3. Connect the supplied USB 3.2 Gen 1 cable between the Local Extender host port and a USB 3 port on the host computer.
4. If the Power LED is AMBER, test the system with the connected device(s) to ensure system is stable. If not a 5V 3A power supply may be required.

## Connecting the Local Extender to the Remote Extender

1. Plug one end of the included Cable into the Link port on the Local Extender.
2. Plug the other end of the included cable into the Link port on the Remote Extender.

## Installing the Remote Extender

1. Place the Remote Extender near and connect it to the USB device.

## Checking the Installation

1. On the Local and Remote Extenders, check that the Power and Link LEDs are on. If the Link LEDs are permanently off or blinking, then the cable between the Local and Remote Extenders may not be installed properly or is defective.
2. For Windows users (7, 8, 8.1, 10), open Device Manager to confirm that the extender system has been installed correctly. Expand the entry for Universal Serial Bus controllers by clicking the "+" sign. If the extender system has been installed correctly, you should find only one instance of "Generic SuperSpeed USB Hub" listed.

To open Device Manager in Windows 7:

Open the Start Menu, right click on "Computer" then select: Manage >> Device Manager

To open Device Manager in Windows 8, 8.1 or 10:

Right click the Start Menu and then select: Device Manager

3. For macOS users, open the System Profiler to confirm that the extender system has installed correctly. In the left-hand column under Hardware, select "USB" and inspect the right-hand panel. If the extender has been installed correctly, you should find it listed as one instance of "Hub" under the USB SuperSpeed Bus.



To open System Profiler in macOS:

Open the Finder, select Applications, then open the Utilities folder and double click on the System Profiler icon.

4. If the extender system is not detected correctly or fails to detect, please consult the Troubleshooting section in this guide.

## Connecting a USB Device

1. Install any software required to operate the USB device. Refer to the documentation for the USB device, as required.
2. Connect the USB device to the device port on the Remote Extender.
3. Check that the device is detected and installed properly in the operating system.

## Compatibility

The USB 3-2-1 Starling 3251C complies with USB 1.1, USB 2.0 and USB 3.2 Gen 1 specifications governing the design of USB devices. However, there is no guarantee that all USB devices or hosts will be compatible as there are a number of different characteristics that may impact the operation of USB devices over extended distances. USB Bus power operation is only guaranteed with USB-C Upstream facing port connections with a USB-C cable.



## Optional USB Extender Mounting Options

The bottom of the Starling 3251C enclosure features four convenient pre-drilled holes for optional direct surface mounting and four mounting slots for easy cable-ties. Based on your requirements, choose from three available mounting options:

1. **USB Extender Mounting Kit**
2. **USB Extender Direct Surface Mounting**
3. **USB Extender Cable-Tie Mounting**

### Option 1: USB Extender Mounting Kit


Order Part #21-00156 for **Starling Starling USB Mounting Kit** is available for purchase separately, and only one kit is required per extender system.

Each kit includes:


- 4 mounting brackets
- 8 (M2.5x4.5mm) Phillips raised cheese head screws with lock and flat washers
- Mounting bracket installation guide (*refer to diagram below*)

Using a Phillips screwdriver, in the order as illustrated below, fasten and secure the provided screws into place.

### Installing the Mounting Brackets

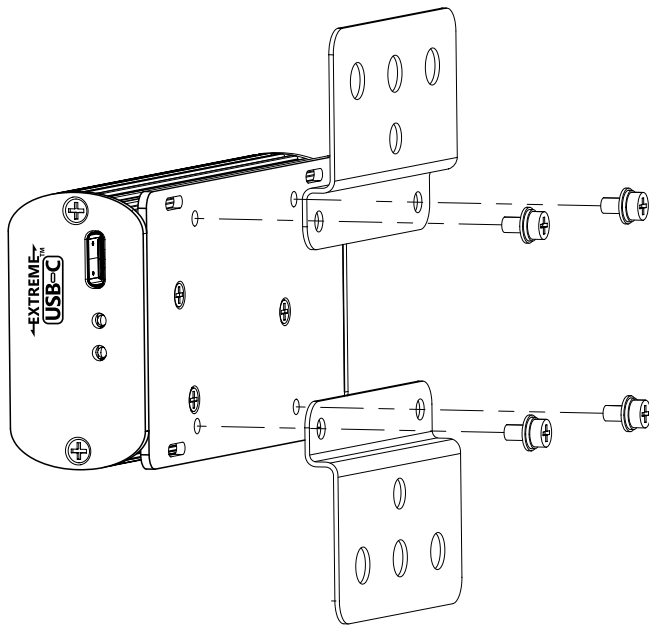

## OPTION 2: USB Extender Direct Surface Mounting (using your own hardware)

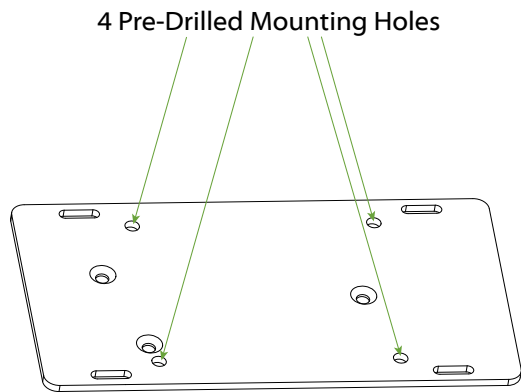


The bottom of the Starling 3251C enclosure features four pre-drilled holes for optional direct surface mounting. Using the stencil below, along with your own hardware you can directly mount your USB Extender on a surface.

Distance between the enclosure mounting holes:  
42.00 x 33.70mm

1. Mark the center point of each of the four holes on your mounting surface either by directly measuring or using a printout of the stencil below.
2. Hardware recommendation: M2.5 locking washers and M2.5 screws (4 of each per extender) noting screw length will depend upon thickness of mounting surface.
3. Drill through each of the four-hole markings on the mounting surface using a 3.70mm (0.1457") drill bit.
4. Align the bottom enclosure holes to the newly drilled out holes on the mounting surface.
5. Place a locking washer on each of the four screws and using a screwdriver, fasten the extender into place.


**note** To ensure the stencil below prints to scale be sure to set the page scaling setting to "none".

## Direct Surface Mounting Measurement Stencil

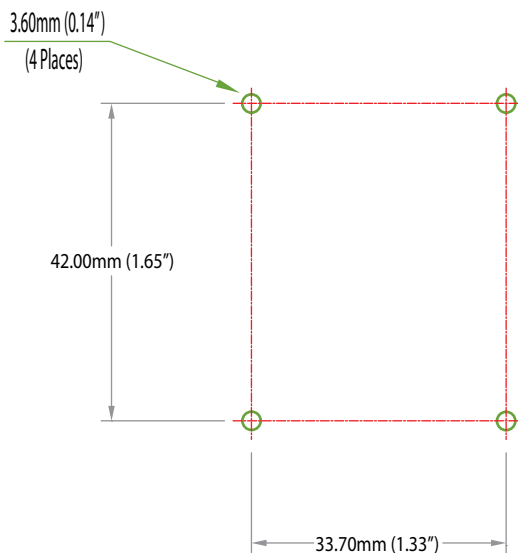

## Option 3: Cable-Tie Mounting

The bottom of the Starling 3251C enclosure also features four convenient slots for cable mounting. Simply thread a cable tie, (also called tie-wrap or zip tie), into the mounting slot and through the cable tie head and secure it to a pole or other surface by pulling it tight. Cable ties are not included with this system due to varying lengths dependent upon the application.

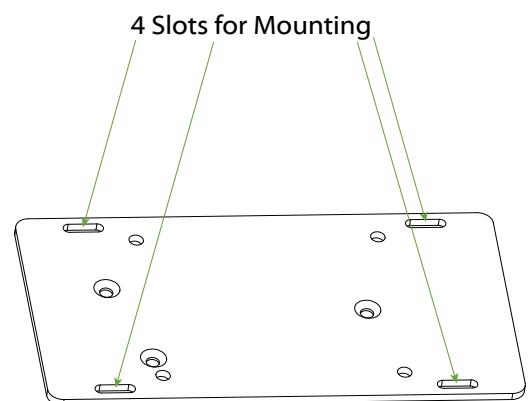

# Troubleshooting

The following table provides troubleshooting tips. The topics are arranged in the order in which they should be executed in most situations. If you are unable to resolve the problem after following these instructions, please contact Technical Support for further assistance.

PROBLEM	CAUSE	SOLUTION
ALL LEDs are OFF on the Local and/or Remote Extender.	<ol style="list-style-type: none"> <li>1. The Local and/or Remote Extender is not receiving power from the AC power adapter.</li> <li>2. The Local Extender is not connected to a host.</li> </ol>	<ol style="list-style-type: none"> <li>1. Ensure that the AC power adapter is properly connected to the Local and/or Remote Extender.</li> <li>2. Check that the AC adapter is connected to a live source of AC power. Check that the Local and/or Remote Extender Power LED is illuminated.</li> </ol>
Link LEDs on the Local and Remote Extenders are OFF or BLINKING.	<ol style="list-style-type: none"> <li>1. There is no connection between the Local and Remote Extenders.</li> </ol>	<ol style="list-style-type: none"> <li>1. Ensure that the included cable is connected securely between the Local and Remote Extenders.</li> </ol>
ALL LEDs on both the Local and Remote Extenders are SOLID ON, but the USB device is not operating correctly, or is detected as an "Unknown Device" in the operating system.	<ol style="list-style-type: none"> <li>1. The USB device is malfunctioning.</li> <li>2. The computer does not recognize the USB device.</li> <li>3. The application software for the USB device is not operating.</li> <li>4. The USB extender is malfunctioning.</li> </ol>	<ol style="list-style-type: none"> <li>1. Disconnect the extender from the computer.</li> <li>2. Connect the USB device directly to the host computer.</li> <li>3. If the device does not operate as expected, consult the user documentation for the device.</li> <li>4. Update the host computer BIOS, chipset, or USB controller drivers from the manufacturer's website.</li> <li>5. If the device operates as expected when directly connected to the computer, connect another device to the extender and reconnect it to the host computer. If the device still does not work, please contact Technical Support for assistance.</li> </ol>

PROBLEM	CAUSE	SOLUTION
<p>A USB 3 device is not enumerating as USB 3, or the operating system is notifying the user that the device can "Perform Faster if connected to a USB 3 port".</p>	<ol style="list-style-type: none"> <li>1. The USB device is malfunctioning.</li> <li>2. The computer does not recognize the USB device.</li> <li>3. The application software for the USB device is not operating.</li> <li>4. The USB 3 port on the computer is malfunctioning.</li> <li>5. The USB extender is malfunctioning.</li> </ol>	<ol style="list-style-type: none"> <li>1. Disconnect the extender from the computer.</li> <li>2. Connect the USB 3 device directly to the host computer.</li> <li>3. If the device does not operate as expected as a USB 3 device, consult the user documentation for that device or try a different USB port on the host computer.</li> <li>4. Update the host computer BIOS, chipset or USB controller drivers from the manufacturer's website.</li> <li>5. If the device operates as USB 3 device when directly connected to the computer, connect another USB 3 device to the extender and reconnect it to the host computer. If the device still does not work, please contact Technical Support for assistance.</li> </ol>
<p>Power LED is Solid Amber.</p>	<ol style="list-style-type: none"> <li>1. Upstream USB connection does not advertise 5V 3A connectivity.</li> </ol>	<ol style="list-style-type: none"> <li>1. Ensure connection is made to an upstream USB-C port (Not Type A or B).</li> <li>2. Switch to a different port.</li> <li>3. Solution may not require all 900mA to operate. Test complete setup.</li> <li>4. Install Optional Power Supply. (Sold separately)</li> <li>5. If not working, please contact Technical Support for assistance.</li> </ol>

# Specifications

<b>RANGE</b>	
Point-to-Point	10m using included Cable
<b>USB DEVICE SUPPORT</b>	
Maximum Throughput	5Gbps
Traffic Types	All Traffic Types
Device Types	All Device Types
Maximum Number of Devices and/or Hubs	30, including Hubs
<b>LOCAL EXTENDER</b>	
USB Connector	1 x USB 3.2 Gen 1 Type-C Receptacle
Link Connector	1 x ARJ45 "LINK"
Dimensions	86.0 x 45.0 x 24.0mm (3.4" x 1.8" x 0.9")
Enclosure Material	Black Anodized Aluminum
Power Supply	Optional 5V 3A (not included, sold separately)
Maximum Wattage	15W (5V 3A) USB or Self-Powered
<b>REMOTE EXTENDER</b>	
USB Connector	1x USB 3.2 Gen 1 Type-C Receptacle
Link Connector	1 x ARJ45 "LINK"
Dimensions	86.0 x 45.0 x 24.0mm (3.4" x 1.8" x 0.9")
Enclosure Material	Black Anodized Aluminum
Available Current	Up to 900mA
<b>ENVIRONMENTAL</b>	
Operating Temperature Range	0°C – 50°C (32°F – 122°F)
Storage Temperature Range	-20°C – 70°C (-4°F – 158°F)
Operating Humidity	20% to 80% relative humidity, non-condensing
Storage Humidity	10% to 90% relative humidity, non-condensing
<b>COMPLIANCE</b>	
EMC	FCC (Class A), CE (Class A)
Environmental	RoHS2/3 (CE)
<b>SUPPORT</b>	
Warranty	2-year

# Power Supply and Accessories


## Ordering Information:

PART #	NAME	DESCRIPTION
21-00111	5V 3A Power Adapter (Level VI) 1.7mm ID	AC Desktop Adapter, 5V 3A, Lvl6, Intl, 1.7mm (ID) plug, IEC320-C7/C8 2-pin
21-00115	NA Ungrounded Power Cord	Cable Power IEC320-C7/C8 1.83m 2-pin NA
21-00116	EU Ungrounded Power Cord	Cable Power IEC320-C7/C8 1.83m 2-pin EU
21-00117	UK Ungrounded Power Cord	Cable Power IEC320-C7/C8 1.83m 2-pin UK
21-00118	AU Ungrounded Power Cord	Cable Power IEC320-C7/C8 1.83m 2-pin AU
21-00109	JP Ungrounded Power Cord	Cable Power IEC320-C7/C8 1.5m 2-pin JP

## Technical Glossary

### USB 3 and USB 2.0 Cables

USB cables have two distinct full-sized connectors. The Type A connector is used to connect the cable from a USB device to the Type A port on a computer or hub. The Type B connector is used to attach the USB cable to a USB device.

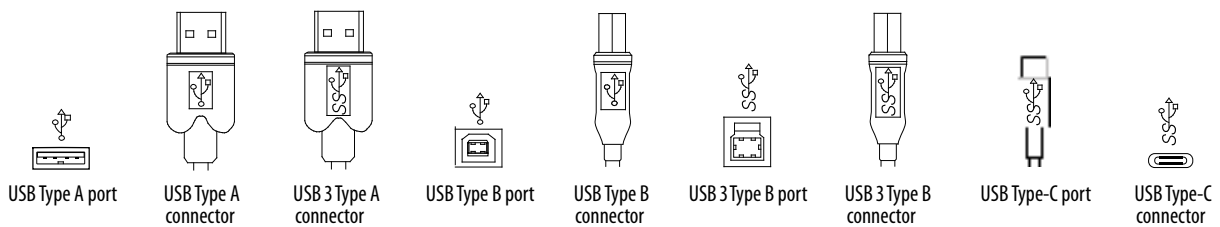

### USB-C Cable

The Type-C Connector is used to connect to both USB Hosts and Devices.

### ARJ45 Cables

Starling 3251C uses a custom cable assembly based on CAT 7 Cable and leverages an ARJ45 Connection. ARJ45 is a high speed (40Gbps) connection that provides superior cross talk performance when compared to a standard RJ45. The ARJ45 Receptacle is keyed and does not allow RJ45 connections.

**!** ARJ45 Cables cannot be terminated in the field and must be done at the factory. We do not recommend or guarantee operation with any cable other than the one included with this product.